
Ultra-Flat (Length 10mm) Picking Sensor

Features

- · Plastic injection case
- Slim body (W30×H140×L9.9mm)
- Long/Short sensing distance mode (sensing distance selection function)
- Mutual interference prevention (frequency switching function)
- Selectable Light ON/Dark ON operation mode by switch
- Picking indicator includes
- Protection structure IP40 (IEC standard)





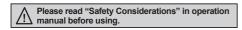

Specifications

Model NPN open collector output PNP open collector output		BWPK25-05			
		BWPK25-05P			
Sensing type		Through-beam			
Sensing	Long distance mode	0.1 to 3m			
distance	Short distance mode	0.05 to 1m			
Sensing targ	jet	Opaque materials of min. Ø35mm			
Optical axis pitch		25mm			
Number of o	ptical axis	5			
Sensing hei	ght	100mm			
Response ti	me	Max. 30ms			
Power supp	у	12-24VDC ±10% (ripple P-P: max. 10%)			
Current con	sumption	Emitter: max. 60mA, Receiver: max. 60mA			
Light source		Infrared LED (850nm modulated)			
Operation mode		Selectable Light ON/Dark ON by switch			
Control output		NPN or PNP open collector output Load voltage: max. 30VDC== Load current: max. 150mA Residual voltage - NPN: max. 1VDC==, PNP: max. 2.5VDC			
Protection circuit		Reverse power polarity, output short over current protection circuit			
Insulation resistance		Over 20MΩ (at 500VDC megger)			
Interference	protection	Interference protection by transmission frequency selection			
External picking input		Non-contact or contact input NPN open collector output: Lighting (0-2V), Light out (5-30V or open) PNP open collector output: Lighting (4-30V), Light out (0-3V or open)			
Noise immu	nity	±240V the square wave noise (pulse width: 1μs) by the noise simulation			
Dielectric st	ength	1,000VAC 50/60Hz for 1minute			
Vibration		1.5mm amplitude or 300m/s ² at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours			
Shock		500m/s² (approx. 50G) in each X, Y, Z direction for 3 times			
	Ambient illumination	Ambient light: max. 10,0001x, Incandescent lamp: max. 3,0001x (received light side illumination)			
Environment	Ambient temperature	-10 to 55°C, storage: -20 to 60°C			
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH			
Protection structure		IP40 (IEC standard)			
Material		Case: Polycarbonate/Acrylonitrile butadiene styrene, Sensing part: Polymethyl methacrylate			
Cable		Ø4.0mm, 4-wire, 2m (emitter: Ø4.0mm, 3-wire, 2m) (AWG 22, core diameter: 0.08mm, number of cores: 60, insulator out diameter: Ø1.25mm)			
Approval		CE			
Weight ^{×1}		Approx. 220g (approx. 180g)			

X1: The weight includes packaging. The weight in parenthesis is for unit only.

C-38

^{*}The temperature or humidity mentioned in Environment indicates a non freezing or condensation environment.

Ø4, 2m


Dimensions (unit: mm) <Emitter> <Receiver> 30 30 Frequency A Stability 18 9.9 9.9 indicator (green) indicator (green) Frequency B indicator (green) Operation indicator (red) Picking indicator 130 140 130 140 (yellow) Operation mode switch 25 (optical axis pitch) 25 (optical axis pitch) Picking indicator (yellow)

Ø4, 2m

<Bracket>: sold separately


• Flat bracket (BK-BWPK-ST)

2-Ø4.2

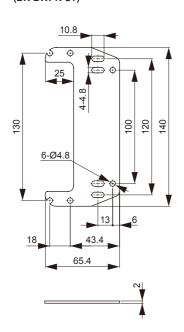

 L-shaped bracket (BK-BWPK-L)

2-Ø4.2

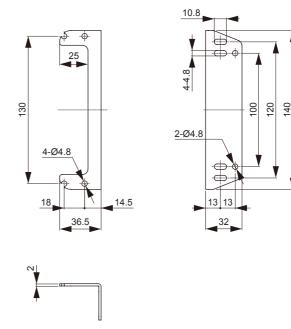

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F)

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

> L) Panel

(M) Tacho / Speed / Pulse

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


(S) Field Network Devices

(T) Software


BWPK Series

Protection bracket (BK-BWPK-P)




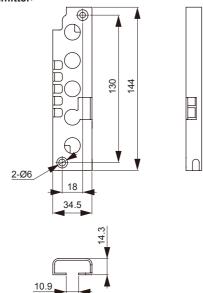




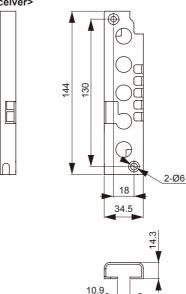

■ Feature Data

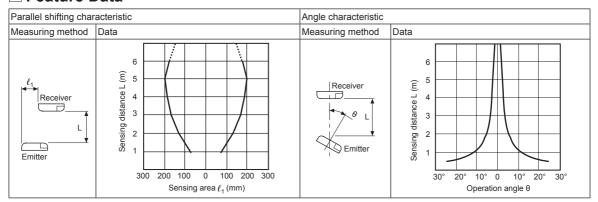

Structure

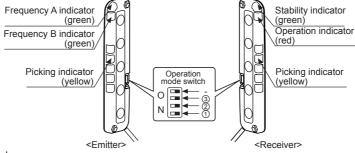


Operation mode switch

No	Function		Switch OFF	Switch ON
1	Selection of transmission frequency		Frequency A	Frequency B
2	Selection of operation indicator		Lighting indicator	Flashing indicator
3	Emitter Selection of sensing distance mode		Long mode	Short mode
	Receiver	Selection of operation mode	Light ON	Dark ON

C-40 Autonics

■ Input/Output Circuit and Connection Diagram


• NPN open collector output

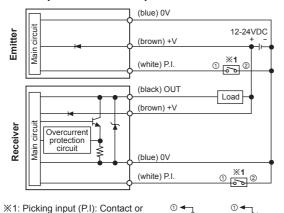

(2)

<Contact>

• PNP open collector output

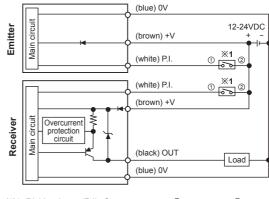

※1: Picking input (P.I): Contact or transistor is ON, and picking indicator operates. ① ◆ ① ◆ ② ◆ ○ Contact> <PNP transistor>


**Picking indicator: When external picking input (P.I) is short-circuited with OUT (Black), it is operated same as ON/OFF status of control output.

<NPN transistor>

Operation Timing Diagram

transistor is ON, and picking

indicator operates

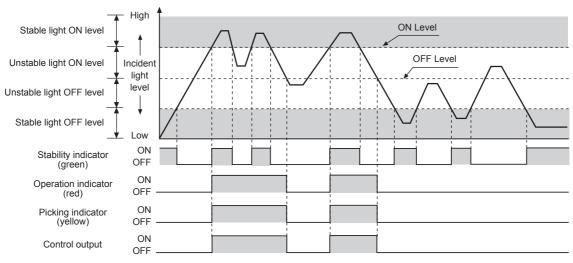

**The above diagram is the state of operation for Light ON, but in case of Dark ON, it is opposite operation against Light ON.

**Picking indicator is operated by connecting picking input line and output line. (If not connecting these, picking indicator is OFF regardless of operation mode.)

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network

> T) Software

Operation Indicator

	Emitter			Receiver				
Item	Indicator			Indicator		Control output		
	Green	Green	Picking indicator (yellow)	Green	Red	Picking indicator (yellow)	Control output	
Power on	₩	•	-	-	-	-	-	
FREQ. A operation	₩	•	-	-	-	-	-	
FREQ. B operation	₩	✡	-	-	-	-	-	
Stable light ON	-	-	\rightarrow	☼	\rightarrow	\rightarrow	ON	
Flashing function ON	-	-	•	₩	\rightarrow	•	ON	
Unstable light ON	-	-	\rightarrow	•	\rightarrow	\rightarrow	ON	
Unstable light OFF	-	-	•	•	•	•	OFF	
Stable light OFF	-	-	•	₩	•	•	OFF	
Overcurrent	-	-	•	J		•	OFF	

Display classification list		
Light ON		
	Light OFF	
•	Flashing by 0.3 sec	
1	Flashing simultaneously by 0.3 sec	

**The operations of 'Operation indicator' and 'Picking indicator (red)' for stable light ON level, unstable light ON level, unstable light OFF level, and stable light OFF level are for Light ON. (In case of overcurrent, control output is OFF regardless of operation mode.)

Function

Switching of Long/Short mode (selectable sensing distance)

The rated sensing distance is 3m for Long mode, 1m for short mode. It minimizes interference setting as short mode when using more than 3 sets closely together.

Interference protection

In case of using 2 pcs of sensor in serial or parallel in order to extend sensing width, it may cause sensing error because of light interference.

This function is operating a sensor in transmission frequency A and another sensor in transmission frequency B to avoid these sensing errors by the light interference.

O Light ON/Dark ON mode

The control output is ON when it is light ON in Light ON and the control output is ON when it is light OFF in Dark ON. It is available to select with user's preference.

Switching of Lighting/Flashing of Picking indicator

Picking indicator is lighting or flashing to make out work sensing operation more easily.


	Operation mode switch (emitter)	Rated sensing distance	
Long mode	- 3 2 1	3m	
Short mode	Short 3 2 1	1m	
	Operation mode switch (emitter+receiver)	Frequency A, B indicator (emitter)	
Sensor (A) (Transmission frequency A)	- 3 2 1 FREQ.A	Frequency A (green) Frequency B (green)	
Sensor (B) (Transmission frequency B)	- (3) (2) FREQ.B (1)	Frequency A (green) Frequency B (green)	
	Operation mode switch (receiver)	Control output operation	
Light ON	- 3 Light ON	It is ON when it is light ON.	
Dark ON	Dark ON 3	It is ON when it is light OFF.	
	Operation mode switch (emitter+receiver)	Picking indicator operation	
Lighting	- 3 2 1 Lighting	Lighting indicator	
Flashing	Flashing 2	Flashing indicator	

C-42 Autonics

Installation


© For direction of installation

Emitter and receiver should be installed as same up/down position.

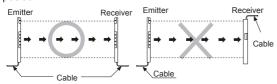

© For reflection from the surface of wall and flat


When installing it as below the light reflected from the surface of wall and flat will not be shaded. Please, check whether it operates normally or not with a sensing target before using. (interval distance: min. 0.3m)

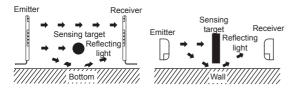



O For prevention of interference

It may cause interference when installing more than 2 sets of the sensor. In order to avoid the interference of the sensor, please install as following figures and use the interference protection function.


Transmission direction should be opposite between 2 sets

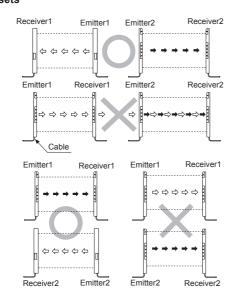

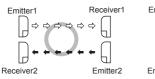


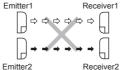

• Baffle should be installed between 2 sets.

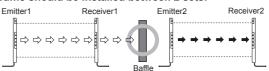

• It should be installed out of the interference distance

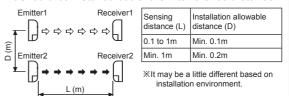

**Avoid using the unit in the place where the sensor is exposed directly to the fluorescent light with high speed start or high frequency.

■ Troubleshooting

Malfunction	Cause	Troubleshooting
Manarotton	Power supply Cable incorrect	Supply rated power.
Non-operation	connection or	Check the wiring.
	Rated connection failure	Use it within rated sensing distance.
Non-operation	Pollution by dirt of sensor cover	Remove dirt by soft brush or cloth.
in sometimes	Connector connection failure	Check the assembled part of the connector.
	Out of rated sensing distance There is an obstacle to cut off the light emitted	Use within rated sensing distance.
Control output is OFF even though there is	between emitter and receiver	Remove the obstacle.
not a target object.	There is a strong electric wave or noise generated by motor, electric generator, high voltage line etc.	Put away the strong electric wave or noise generator.
LED displays for over	Control output line is shorten	Check the wiring.
current	Over load	Check the rated load capacity.

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J)

K)

Panel Meters

(M) Tacho / Speed / Puls Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(T)

Autonics C-43

BWPK Series

Proper Usage

- 1. Follow instructions in 'Proper Usage'.
 - Otherwise, It may cause unexpected accidents.
- 2. 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- 3. Use the product, 1 sec after supplying power.
 - When using separate power supply for the sensor and load, supply power to sensor first.
- 4. When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- 5. When connecting a DC relay or other inductive load, remove surge by using diodes or varistors.
- 6. Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise.
- 7. This unit may be used in the following environments.
 - ①Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2,000m
 - ③Pollution degree 2
 - 4 Installation category II

C-44 Autonics